


GenInterlock.com

Panel	Cutler Hammer CH Series 150 & 200 Vertical operated main 2 ¼ spacing from bottom of main to top left breaker
Model	EAT-CH200XA Pat. Pending
Main Breaker	150 or 200 amp single handle Vertical throw up (on) to down (off)
Generator Breaker	Top left side 2 positions

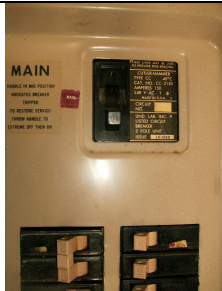

WARNING

Only qualified personnel should be working on the panel box
An amateur should NEVER open the panel box
Please follow all rules and regulations of the National Electric Code

Step 1: Place the drill plate (holes only) above the top left breaker and mark holes. Throw away drill plate after use, not used on this panel after marking holes.




Step 2: Turn off main breaker and remove panel cover.

Step 3: Drill holes as marked on panel cover with supplied 3/16 drill bit and remove all burs from drilling cover and dispose of this plate at this time.

Step 4: Insert screws from rear of cover, and install slotted top plate only, install tread lock to screws and install retaining nuts. Ensure proper movement.

Step 5: Install 2 pole Generator breaker on top left side and place Generator Warning Sticker on Generator breaker.

Step 6: Combine the zip ties to make a loop and install zip ties around top set of breakers in panel as shown in picture below. Pull on ends to make tight around breakers. Trim zip ties as needed and Install Warning label next to release tab on zip tie at generator breaker.

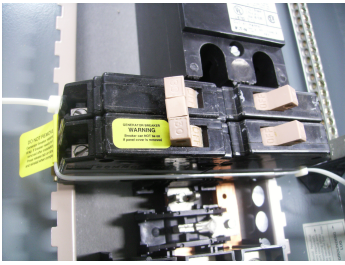

Step 7 : Re-Install panel cover, Verify proper operation of interlock. Main breaker **ON**, generator breaker **OFF** and generator breaker **CAN NOT** be turned on. Generator breaker **ON**, main breaker **OFF** and main breaker **CAN NOT** be turned on.



Generator on



Main on

Step 8: Place Generator start-up procedure label on panel box, Place CAUTION label on panel box and electric meter pan.

The MAIN and the GENERATOR breakers should NEVER be able to be turned on at the same time. If panel cover is removed the Generator breaker is NEVER to be turned on. If for any reason the interlock does not function properly, DO NOT USE and contact us immediately at sales@GenInterlock.com for support and instructions.

Thank You for your support,
GenInterlock Team

DISCLAIMER: GenInterlock.com is NOT responsible for misuse or improper installation. All electrical equipment should be installed and maintained by qualified personnel. Any consequences arising from improper use is the responsibility of the user.

GenInterlock.com
2227 US Highway 1 – Unit 124
North Brunswick, NJ 08902
Sales@geninterlock.com
732-339-4191